

I'm not a robot



































thread and wrap it around the bobbin winding tension disc. Thread onto the pin of the bobbin and place it on the bobbin winder. Push the winder to the right to engage it, then start the machine to wind the bobbin smoothly. Q: How do I ensure the thread is securely loaded at the back of the machine? A: To ensure the thread is secure, double-check that the thread is correctly placed through all guides and tension discs. Make sure the thread is snug but not too tight, and test by gently pulling to see if it unwinds smoothly without resistance. Q: What should I do if my sewing machine isn't threading correctly? A: If your sewing machine isn't threading correctly, recheck each step in the threading process, from threading the top portion to loading the bobbin. Ensure the needle is properly raised, and consult your sewing machine model's manual for troubleshooting tips. Home > Hobby & Leisure > Sewing Machines > Singer Sewing Machines > Singer 834 Sewing Machine Need a manual for your Singer 834 Sewing Machine? Below you can view and download the PDF manual for free in English. This product currently has 5 frequently asked questions, 0 comments and has 1 vote with an average product rating of 100/100. If this is not the manual you want, please contact us. Is your product defective and the manual offers no solution? Go to a Repair Café for free repair services. Let us know what you think about the Singer 834 Sewing Machine by leaving a product rating. Want to share your experiences with this product or ask a question? Please leave a comment at the bottom of the page. Are you satisfied with the Singer 834 Sewing Machine? Yes No We understand that it's nice to have a paper manual for your Singer 834 Sewing Machine. You can always download the manual from our website and print it yourself. If you would like to have an original manual, we recommend you contact Singer. They might be able to provide an original manual. Are you looking for the manual of your Singer 834 Sewing Machine in a different language? Choose your preferred language on our homepage and search for the model number to see if we have it available. Brand Singer Model 834 Category Sewing Machines File type PDF File size 9.01 MB All manuals for Singer Sewing Machines More manuals of Sewing Machines Our support team searches for useful product information and answers to frequently asked questions. If you find an inaccuracy in our frequently asked questions, please let us know by using our contact form. The size of the needle depends on the fabric. For a thicker fabric, you will need a thicker needle. The application of the needle of often mentioned on the packaging. This was helpful (1208) Read more If the upper thread of the machine keeps breaking where the needle enters the fabric, it could be that the needleplate or bobbin case have minor damages in the form of scratches and/or sharp edges. These minor damages can cause the thread to break after a few stitches. This was helpful (1140) Read more This varies between manufacturers, but in general a needle will last about 8 hours. It might take longer for the needle to break, but before that it will have become blunt and might damage the fabric. This was helpful (560) Read more There can be various reasons for this. The needle may not be the correct one for the selected fabric, the needle may have been set too low, the fabric may not be properly guided or the bobbin case may be placed incorrectly. This was helpful (537) Read more You can change the needle after turning off the product with the on/off switch. When cleaning the product you should disconnect it from the power supply. This was helpful (439) Read more